

Binary Systems

BME208 – Logic Circuits

Yalçın İŞLER

islerya@yahoo.com

<http://me.islerya.com>

Binary Numbers 1/2

- Internally, information in digital systems is of binary form
 - groups of bits (i.e. binary numbers)
 - all the processing (arithmetic, logical, etc) are performed on binary numbers.
- Example: 4392
 - In decimal, $4392 = \dots$
 - Convention: write only the coefficients.
 - $A = a_1 a_0 \cdot a_{-1} a_{-2} a_{-3}$ where $a_j \in \{0, 1, \dots, 9\}$
 - How do you calculate the value of A?

Binary Numbers 2/2

- Decimal system
 - coefficients are from $\{0,1, \dots, 9\}$
 - and coefficients are multiplied by powers of 10
 - base-10 or radix-10 number system
- Using the analogy, binary system $\{0,1\}$
 - base(radix)-2
- Example: 25.625
 - 25.625 = decimal expansion
 - 25.625 = binary expansion
 - 25.625 =

Base-r Systems

- base-r (n, m)
 - $A = a_{n-1} r^{n-1} + \dots + a_1 r^1 + a_0 r^0 + a_{-1} r^{-1} + a_{-2} r^{-2} + \dots + a_{-m} r^{-m}$
- Octal
 - base-8 = base- 2^3
 - digits {0, 1, ..., 7}
 - Example: $(31.5)_8 = \text{octal expansion} =$
- Hexadecimal
 - base-16
 - digits {0, 1, ..., 9, A, B, C, D, E, F}
 - Example:
 - $(19.A)_{16} = \text{hexadecimal expansion} =$

Powers of 2

- $2^{10} = 1,024$ (K) -
- $2^{20} = 1,048,576$ (M) -
- $2^{30} \rightarrow$ (G) -
- $2^{40} \rightarrow$ (T) -
- $2^{50} \rightarrow$ (P) -
- exa, zetta, yotta, ... (exbi, zebi, yobi, ...)
- Examples:
 - A byte is 8-bit, i.e. 1 B
 - 16 GB = ? B = 17,179,869,184

Arithmetic with Binary Numbers

$$\begin{array}{r}
 10101 \quad 21 \quad \text{augend} \\
 + 10011 \quad 19 \quad \text{addend} \\
 \hline
 1\ 01000 \quad 40 \quad \text{sum}
 \end{array}$$

$$\begin{array}{r}
 10101 \quad 21 \quad \text{minuend} \\
 - 10011 \quad 19 \quad \text{subtrahend} \\
 \hline
 0\ 00010 \quad 2 \quad \text{difference}
 \end{array}$$

$$\begin{array}{r}
 0\ 0\ 1\ 0 \quad \text{multiplicand (2)} \\
 \times 1\ 0\ 1\ 1 \quad \text{multiplier (11)} \\
 \hline
 0\ 0\ 1\ 0 \\
 0\ 0\ 1\ 0 \\
 0\ 0\ 0\ 0
 \end{array}$$

$$\begin{array}{r}
 0\ 0\ 0\ 0 \\
 + 0\ 0\ 1\ 0 \\
 \hline
 0\ 0\ 1\ 0\ 1\ 1\ 0 \quad \text{product (22)}
 \end{array}$$

Multiplication with Octal Numbers

				3	4	5	229	multiplicand	
			×	6	2	1	401	multiplier	
			<hr/>						
				3	4	5			
			7	1	2				
+	2	5	3	6					
<hr/>									
	2	6	3	2	6	5	91829	product	

Base Conversions

- From base- r to decimal is easy
 - expand the number in power series and add all the terms
- Reverse operation requires division
- Simple idea:
 - divide the decimal number successively by r
 - accumulate the remainders
- If there is a fraction, then integer part and fraction part are handled separately.

Base Conversion Examples 1/3

- Example 1:

- 55
- (decimal to binary)

55	1	↑	1
27	1		2
13	1		4
6	0		
3	1		16
1=	1		32

- Example 2:

- 144
- (decimal to octal)

144	0	↑	0x8 ⁰
18	2		2x8 ¹
2=	2		2x8 ²

Base Conversion Examples 2/3

- Example 1: 0.6875 (decimal to binary)
 - When dealing with fractions, instead of dividing by r multiply by r until we get an integer
 - $0.6875 \times 2 = 1.3750 = 1 + 0.375 \rightarrow a_{-1} = 1$
 - $0.3750 \times 2 = 0.7500 = 0 + 0.750 \rightarrow a_{-2} = 0$
 - $0.7500 \times 2 = 1.5000 = 1 + 0.500 \rightarrow a_{-3} = 1$
 - $0.5000 \times 2 = 1.0000 = 1 + 0.000 \rightarrow a_{-4} = 1$

 - $(0.6875)_{10} = (0.1011)_2$

Base Conversion Examples 2/3

- We are not always this lucky
- Example 2: (144.478) to octal
 - Treat the integer part and fraction part separately
 - $0.478 \times 8 = 3.824 = 3 + 0.824 \rightarrow a_{-1} = 3$
 - $0.824 \times 8 = 6.592 = 6 + 0.592 \rightarrow a_{-2} = 6$
 - $0.592 \times 8 = 4.736 = 4 + 0.736 \rightarrow a_{-3} = 4$
 - $0.736 \times 8 = 5.888 = 5 + 0.888 \rightarrow a_{-4} = 5$
 - $0.888 \times 8 = 7.104 = 7 + 0.104 \rightarrow a_{-5} = 7$
 - $0.104 \times 8 = 0.832 = 0 + 0.832 \rightarrow a_{-6} = 0$
 - $0.832 \times 8 = 6.656 = 6 + 0.656 \rightarrow a_{-7} = 6$
 - $144.478 = (220.3645706\dots)_8$

Conversions between Binary, Octal and Hexadecimal

- $r = 2$ (binary), $r = 8$ (octal), $r = 16$ (hexadecimal)

10110001101001.101100010111

10 110 001 101 001.101 100 010 111

10 1100 0110 1001.1011 0001 0111

- Octal and hexadecimal representations are more compact.
- Therefore, we use them in order to communicate with computers directly using their internal representation

Complement

- Complementing is an operation on base- r numbers
- Goal: To simplify subtraction operation
 - Rather turn the subtraction operation into an addition operation
- Two types
 1. Radix complement (r 's complement)
 2. Diminished complement ($(r-1)$'s complement)
- When $r = 2$
 1. 2's complement
 2. 1's complement

How to Complement?

- A number N in base- r (n -digit)
 1. $r^n - N$ r 's complement
 2. $(r^n - 1) - N$ $(r-1)$'s complement
 - where n is the number of digits we use
- Example: Base $r = 2$, #Digits $n = 4$, Given $N = 7$
 - $r^n = 2^4 = 16$, $r^n - 1 = 15$.
 - 2's complement of 7 \rightarrow 9
 - 1's complement of 7 \rightarrow 8
- Easier way to compute 1's and 2's complements
 - Use binary expansions
 - 1's complement: negate
 - 2's complement: negate + increment

How to Complement?

- 10's complement of 9 is $0+1=1$
- 10's complement of 09 is $90+1=91$
- 10's complement of 009 is $990+1=991$
- 9's complement of 9 is 0
- 9's complement of 09 is 90
- 9's complement of 009 is 990
- 2's complement of 100 is $011+1=100$
- 2's complement of 111 is $000+1=001$
- 2's complement of 000 is 000
- 1's complement of 11110001 is 00001110

Subtraction with Complements 1/4

- Conventional subtraction
 - Borrow concept
 - If the minuend digit is smaller than the subtrahend digit, you borrow “1” from a digit in higher significant position
- With complements
 - $M - N = ?$
 - $r^n - N$ r 's complement of N
 - $M + (r^n - N) =$

$$\begin{array}{r} \text{minuend} \\ - \text{subtrahend} \\ \hline \text{difference} \end{array}$$

Subtraction with Complements 2/4

- $M + (r^n - N) = M - N + r^n$
 1. if $M \geq N$,
 - the sum will produce a carry, that can be discarded
 2. Otherwise,
 - the sum will not produce a carry, and will be equal to $r^n - (N-M)$, which is the r 's complement of $N-M$

Subtraction with Complements 3/4

- Example:

– $X = 101\ 0100$ (84) and $Y = 100\ 0011$ (67)

– $X - Y = ?$ and $Y - X = ?$

	X	1010100	84	
2's complement of Y	+	0111101	2's comp of 67	
		<hr/>		
		10010001	17	
	Y	1000011	67	
2's complement of X	+	0101100	2's comp of 84	
		<hr/>		
		1101111	111	

2's complement of $X - Y$

Subtraction with Complements 4/4

- Example: Previous example using 1's complement

– X = 101 0100 (84) and Y = 100 0011 (67)

	X	1010100	84
1's complement of	Y	+ 0111100	1s comp of 67
		1 0010000	16

Increase by 1 to get X-Y

	Y	1000011	67
1's complement of	X	+ 0101011	1s comp of 84
		1101110	110

1's complement of X-Y

Signed Binary Numbers

- Pencil-and-paper
 - Use symbols “+” and “-”
- We need to represent these symbols using bits
 - Convention:
 - 0 positive
 - 1 negative
 - The leftmost bit position is used as a sign bit
 - In signed representation, bits to the right of sign bit is the number
 - In unsigned representation, the leftmost bit is a part of the number (i.e. the most significant bit (MSB))

Signed Binary Numbers

- Example: 5-bit numbers
 - 01011 → (unsigned binary) Number is 11
 - → (signed binary) Number is +11
 - 11011 → (unsigned binary) Number is 27
 - → (signed binary) Number is -11
 - This method is called “signed-magnitude” and is **rarely** used in digital systems (if at all)
- In computers, *a negative number is represented by the **complement** of its absolute value.*
- Signed-complement system
 - positive numbers have always “0” in the MSB position
 - negative numbers have always “1” in the MSB position

Signed-Complement System

- Example:
 - Decimal 11 = $(01011)_2$
 - How to represent -11 in 1's and 2's complements
 1. 1's complement $-11 =$
 2. 2's complement $-11 =$
 - If we use eight bit precision:
 - $11 = 00001011$
 - 1's complement $-11 = 11110100$
 - 2's complement $-11 = 11110101$

Signed Number Representation

Signed magnitude		One's complement		Two's complement	
000	+0	000	+0	000	0
001	+1	001	+1	001	+1
010	+2	010	+2	010	+2
011	+3	011	+3	011	+3
100	-0	111	-0	111	-1
101	-1	110	-1	110	-2
110	-2	101	-2	101	-3
111	-3	100	-3	100	-4

- Issues: balance, number of zeros, ease of operations
- Which one is best? Why?

Arithmetic Addition

- Examples:

$$\begin{array}{r} +11 \quad 00001011 \\ +9 \quad + 00001001 \\ \hline 00010100 \end{array}$$

$$\begin{array}{r} -11 \quad 11110101 \\ +9 \quad + 00001001 \\ \hline 11111110 \end{array}$$

$$\begin{array}{r} +11 \quad 00001011 \\ -9 \quad + 11110111 \\ \hline 10000010 \end{array}$$

No carry, leftmost bit is 0, result is what you want

$$\begin{array}{r} -9 \quad + 11110111 \\ \hline 11110110 \end{array}$$

- No special treatment for sign bits

Arithmetic Addition

- Examples:

$$\begin{array}{r}
 + \\
 \hline
 00010100
 \end{array}$$

No carry, leftmost bit is 1, result is negative, take 2s complement, get -2

$$\begin{array}{r}
 -11 \\
 +9 \\
 \hline
 11110101 \\
 + 00001001 \\
 \hline
 11111110
 \end{array}$$

$$\begin{array}{r}
 +11 \\
 -9 \\
 \hline
 00001011 \\
 + 11110111 \\
 \hline
 10000010
 \end{array}$$

$$\begin{array}{r}
 -11 \\
 -9 \\
 \hline
 11110101 \\
 + 11110111 \\
 \hline
 111101100
 \end{array}$$

- No special treatment for sign bits

Arithmetic Addition

- Examples:

$$\begin{array}{r} +11 \\ +9 \\ \hline \end{array} \quad \begin{array}{r} 00001011 \\ 00001001 \\ \hline \end{array}$$

$$\begin{array}{r} +11 \\ -9 \\ \hline \end{array} \quad \begin{array}{r} 00001011 \\ 11110111 \\ \hline \end{array}$$

Carry=1, leftmost bit is 0, result is what you want

$$\begin{array}{r} +11 \\ -9 \\ \hline \end{array} \quad \begin{array}{r} 00001011 \\ 11110111 \\ \hline \end{array}$$

$$\begin{array}{r} +11 \\ -9 \\ \hline \end{array} \quad \begin{array}{r} 00001011 \\ 11110111 \\ \hline \end{array}$$

$$10000010$$

$$\begin{array}{r} -11 \\ +9 \\ \hline \end{array} \quad \begin{array}{r} 11110101 \\ 00001001 \\ \hline \end{array}$$

$$\begin{array}{r} -11 \\ -9 \\ \hline \end{array} \quad \begin{array}{r} 11110101 \\ 11110111 \\ \hline \end{array}$$

$$11111110$$

$$\begin{array}{r} -11 \\ -9 \\ \hline \end{array} \quad \begin{array}{r} 11110101 \\ 11110111 \\ \hline \end{array}$$

$$\begin{array}{r} -11 \\ -9 \\ \hline \end{array} \quad \begin{array}{r} 11110101 \\ 11110111 \\ \hline \end{array}$$

$$111101100$$

- No special treatment for sign bits

Arithmetic Addition

- Examples:

$$\begin{array}{r}
 +11 \quad 00001011 \\
 +9 \quad + 00001001 \\
 \hline
 \end{array}$$

$$\begin{array}{r}
 -11 \quad 11110101 \\
 +9 \quad + 00001001 \\
 \hline
 \end{array}$$

11111110

Carry=1, leftmost bit is 1, result is negative, take 2s complement, get -20

$$\begin{array}{r}
 -11 \quad 00001011 \\
 -9 \quad + 11110111 \\
 \hline
 100000010
 \end{array}$$

$$\begin{array}{r}
 -11 \quad 11110101 \\
 -9 \quad + 11110111 \\
 \hline
 \end{array}$$

111101100

- No special treatment for sign bits

Arithmetic Overflow 1/2

- In hardware, we have limited resources to accommodate numbers
 - Computers use 8-bit, 16-bit, 32-bit, and 64-bit registers for the operands in arithmetic operations.
 - Sometimes the result of an arithmetic operation get too large to fit in a register.

Arithmetic Overflow 2/2

- Example:

$$\begin{array}{r} +2 \quad 0010 \\ +4 \quad + \quad 0100 \\ \hline \quad \quad 0110 \end{array}$$

$$\begin{array}{r} +7 \quad 0111 \\ +6 \quad + \quad 0110 \\ \hline \quad \quad 1101 \end{array}$$


$$\begin{array}{r} -3 \quad 1101 \\ -5 \quad + \quad 1011 \\ \hline \quad \quad 10000 \end{array}$$

$$\begin{array}{r} -3 \quad 1101 \\ -6 \quad + \quad 1010 \\ \hline \quad \quad 10111 \end{array}$$

- Rule: If the MSB and the bits to the left of it differ, then there is an overflow

Subtraction with Signed Numbers

- Rule: is the same
- We take the 2's complement of the subtrahend
 - It does not matter if the subtrahend is a negative number.
 - $(\pm A) - (-B) = \pm A + B$

-6	11111010		-6	11111010	
-13	-	11110011		+	00001101
<hr/>				<hr/>	
				1	00000111

- Signed-complement numbers are added and subtracted in the same way as unsigned numbers
- With the same circuit, we can do both signed and unsigned arithmetic

Alphanumeric Codes

- Besides numbers, we have to represent other types of information
 - letters of alphabet, mathematical symbols.
- For English, alphanumeric character set includes
 - 10 decimal digits
 - 26 letters of the English alphabet (both lowercase and uppercase)
 - several special characters
- We need an alphanumeric code
 - ASCII
 - American Standard Code for Information Exchange
 - Uses 7 bits to encode 128 characters

ASCII Code

- 7 bits of ASCII Code
 - $(b_6 b_5 b_4 b_3 b_2 b_1 b_0)_2$
- Examples:
 - $A \rightarrow 65 = (1000001), \dots, Z \rightarrow 90 = (1011010)$
 - $a \rightarrow 97 = (1100001), \dots, z \rightarrow 122 = (1111010)$
 - $0 \rightarrow 48 = (0110000), \dots, 9 \rightarrow 57 = (0111001)$
- 128 different characters
 - $26 + 26 + 10 = 62$ (letters and decimal digits)
 - 32 special printable characters %, *, \$
 - 34 special control characters (non-printable): BS, CR, etc.

Representing ASCII Code

- 7-bit
- Most computers manipulate 8-bit quantity as a single unit (byte)
 - One ASCII character is stored using a byte
 - One unused bit can be used for other purposes such as representing Greek alphabet, italic type font, etc.
- The eighth bit can be used for error-detection
 - parity of seven bits of ASCII code is prefixed as a bit to the ASCII code.
 - A → (0 1000001) even parity
 - A → (1 1000001) odd parity
 - Detects one, three, and any odd number of bit errors

Binary Logic

- Binary logic is equivalent to what it is called “two-valued Boolean algebra”
 - Or we can say it is an implementation of Boolean algebra
- Deals with variables that take on “two discrete values” and operations that assume logical meaning
- Two discrete values:
 - {true, false}
 - {yes, no}
 - {1, 0}

Binary Variables and Operations

- We use A, B, C, x, y, z , etc. to denote binary variables
 - each can take on $\{0, 1\}$
- Logical operations
 1. AND $\rightarrow x \cdot y = z$ or $xy = z$
 2. OR $\rightarrow x + y = z$
 3. NOT $\rightarrow \bar{x} = z$ or $x' = z$
 - For each combination of the values of x and y , there is a value of specified by the definition of the logical operation.
 - This definition may be listed in a compact form called truth table.

Truth Table

x	y	AND $x \cdot y$	OR $x + y$	NOT x'
0	0			
0	1			
1	0			
1	1			

Logic Gates

- Binary values are represented as electrical signals
 - Voltage, current
- They take on either of two recognizable values
 - For instance, voltage-operated circuits
 - $0V \rightarrow 0$
 - $4V \rightarrow 1$
- Electronic circuits that operate on one or more input signals to produce output signals
 - AND gate, OR gate, NOT gate

Range of Electrical Signals

- What really matters is the range of the signal value



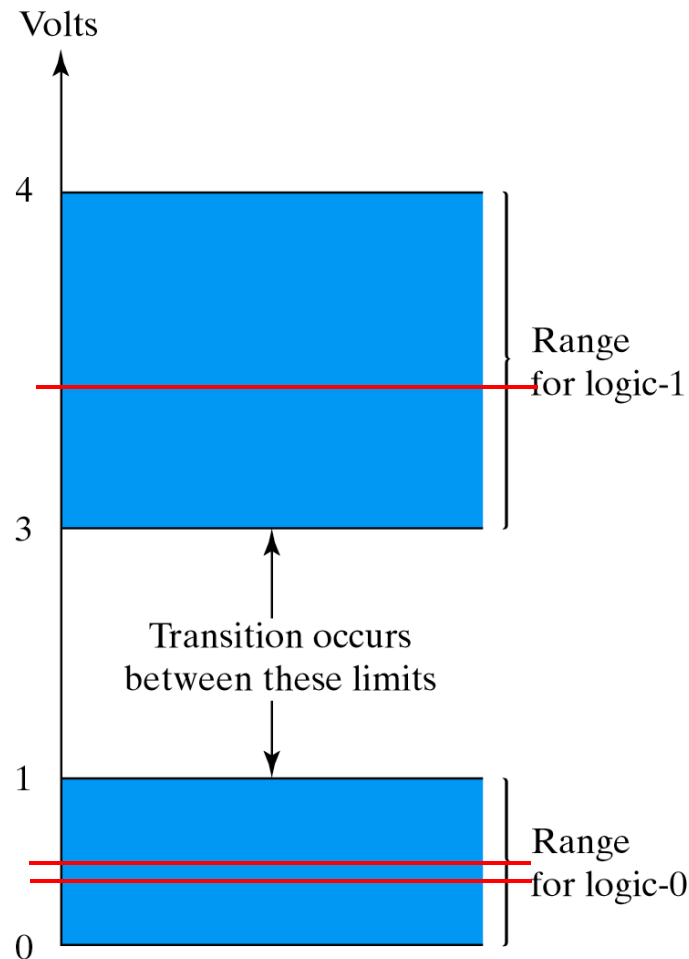


Fig. 1-3 Example of binary signals


Logic Gate Symbols

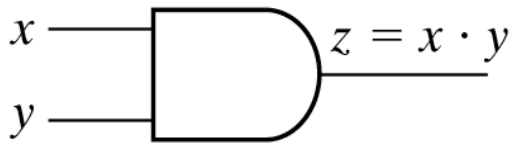

(a) Two-input AND gate



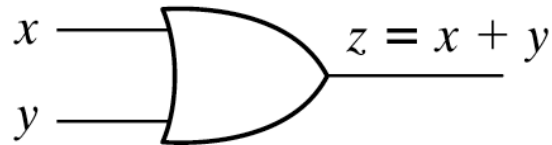


(b) Two-input OR gate

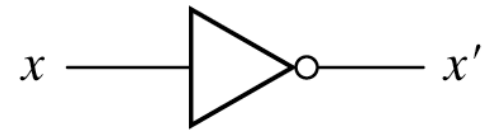


(c) NOT gate or inverter

Fig. 1-4 Symbols for digital logic circuits

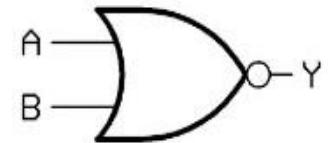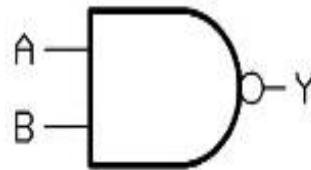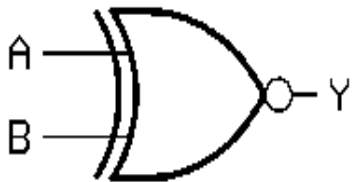


Gates Operating on Signals

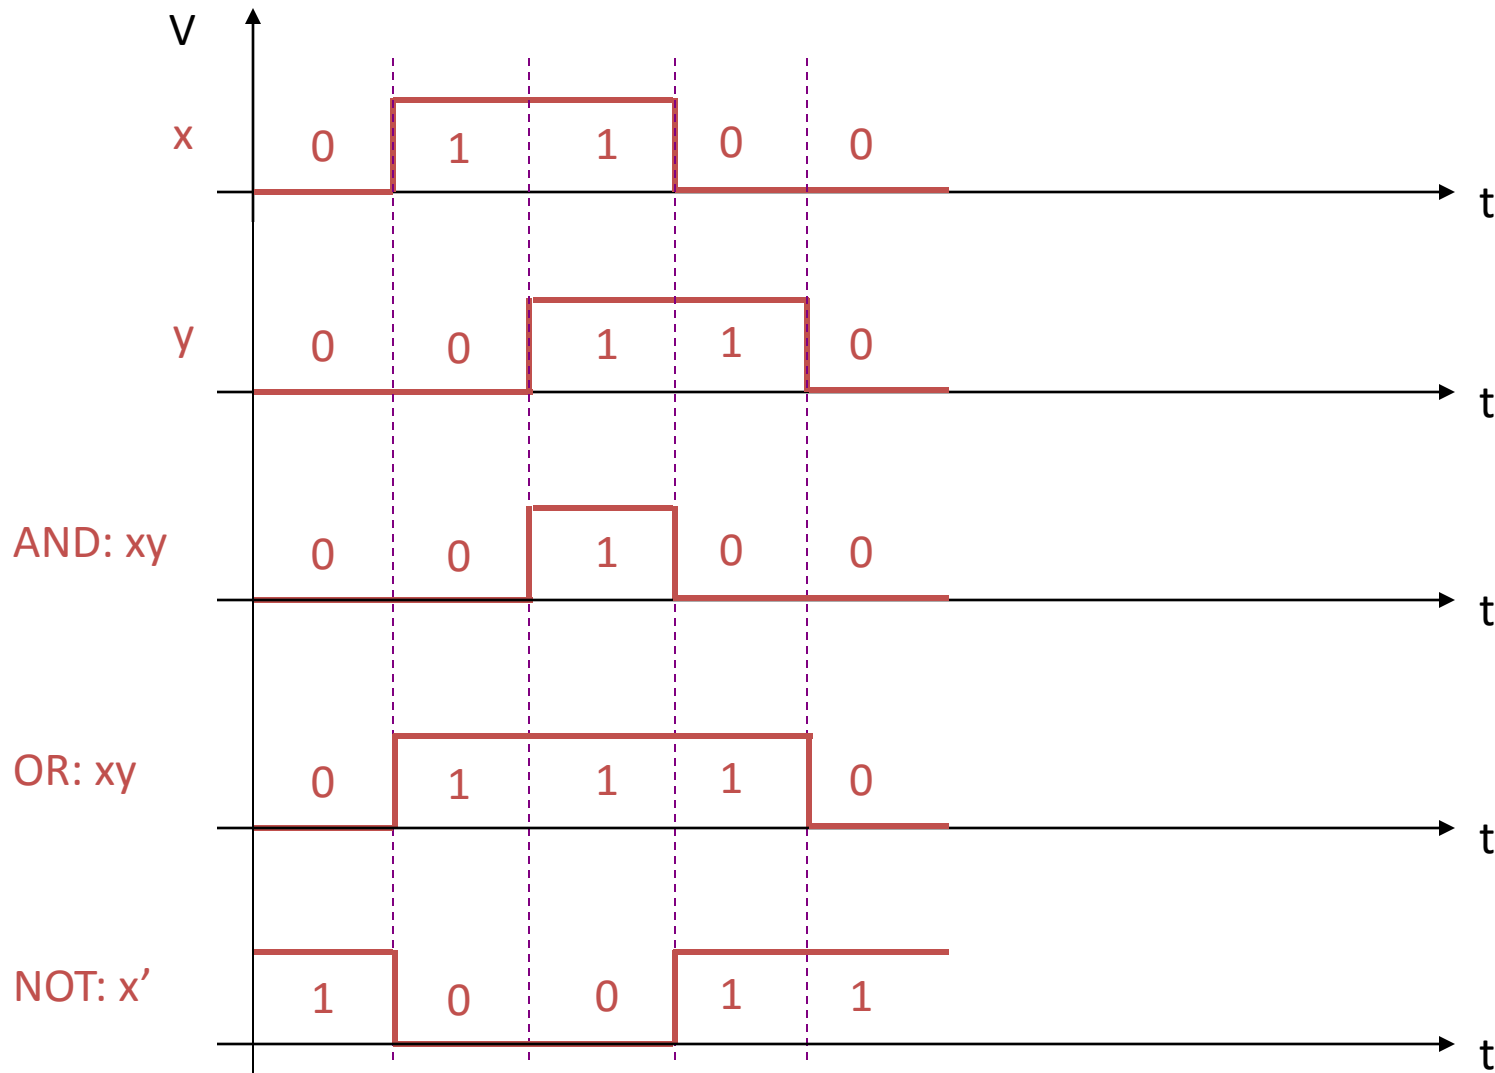


Input-Output Signals for gates

Gates with More Than Two Inputs

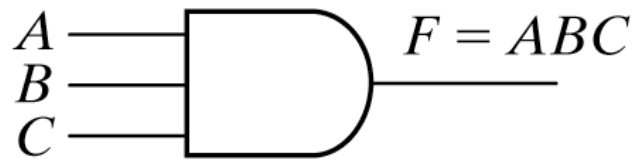

(a) Three-input AND gate

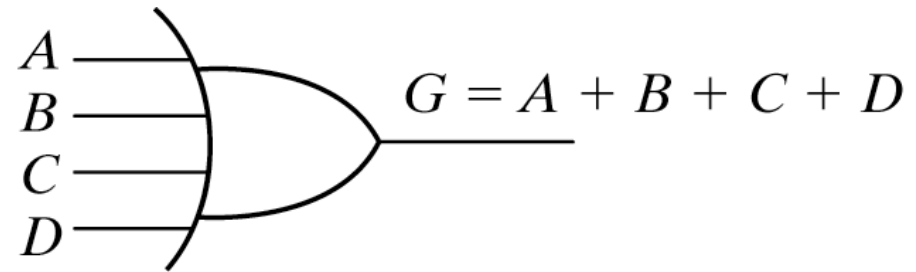

(b) Four-input OR gate

Fig. 1-6 Gates with multiple inputs